



Your Handle Type:

Hoppe Inactive



1

Use a 6-mm Allen wrench to remove the handle from the escutcheon plate.



2

Place the washer on the bolt.



Ŋ

Insert the bolt through the square hole on the back of the escutcheon plate.



Fit the extension over the bolt. Line up the square projection of the extension over the square hole in the escutcheon plate.



Seat the handle in the square hole of the extension.



Use a 3/4-inch or 19-mm socket to tighten the bolt.



7

Make sure that the door handle is perpendicular to the escutcheon plate.